

GTK LW 4G PROTOCOL

GPS Tracker Communication Protocol V1.0

TABLE OF CONTENTS

REVISION HISTORY	5
1. COMMUNICATION PROTOCOL	6
2. TERM / MEANINGS.....	7
3. DESCRIPTION.....	9
4. AVAILABLE INTERFACES.....	10
4.1 Interface.....	10
4.2 SMS	10
4.3 IP (network connection)	10
4.4 USB communication.....	12
5. DATA TYPES	12
5.1 Integer.....	13
5.2 String	13
5.3 Time	13
5.4 Status Device	14
5.5 Course & Status.....	15
6. PARSING DATA.....	17
6.1 Latitude.....	17
6.2 Longitude	17
6.3 GPS Information	17
6.4 GSM Signal Degree.....	18
6.5 Battery Voltage Level.....	18
6.6 Battery Voltage.....	18
6.7 External Voltage	18
7. NETWORK PROTOCOL.....	18

7.1 TCP/IP	18
8. PACKAGES	20
8.1 Start Bit.....	20
8.2 Package Length	20
8.3 Protocol number	20
8.4 Information content	21
8.5 Information serial number.....	21
8.6 Error Checking.....	21
8.7 End bit.....	22
9. Data packEt sent from device to server	23
9.1 Login information packet (0x01).....	23
9.1.1 Device Sending Login information Packet to Server	23
9.1.2. Server Responds the Login information Packet.	23
9.2. Location data Packet (0x17).....	24
9.2.1 Device Sending Location Data Packet to Server.....	24
5.3.2. Server Responds the Location Data Packet.....	26
9.4. Status information Packet (Heartbeat Packet) (0x13)	27
9.4.1 Device Sending Status information Packet to Server.....	27
9.4.2. Server Responds the Status information Packet.	28
9.5. Alarm Packet (0x16).....	29
9.5.1 Device Sending Alarm Packet to Server.....	29
9.4.2. Server Responds the Alarm Packet.	31
9.9. ICCID Packet (0x094)	32
9.9.1 Device Sending ICCID information Packet to Server	32
9.9.2. Server Responds Data Packet	33
10. Data Packet Sent From Server to Device	34
10.1. Packet Sent by Server(0x80).....	34
10.2. Packet Replied by Device (0x15)	34

11. CRC-ITU lookup table algorithm Code.....	36
12. COMMANDS LIST	38

REVISION HISTORY

Version	Date	Description	Author	Reviewer
V1.0.0	01/03/2024	Initial Release	Gustavo Rezende	Bernardo Polese

1. COMMUNICATION PROTOCOL

This document defines the instructions for using the GPS vehicle tracker platform. The reference interface protocol outlined here only applies to data transfer between the platform and the server.

2. TERM / MEANINGS

Terms	Explanation
A-GPS	Assisted GPS
ACC	Accessory (Ignition of vehicle)
APN	Access Point Name
CAN	Controller Area Network
CID	Cell Tower Identifier
CRC	Cyclic Redundancy Check
DIN	Digital Input
GMT	Greenwich Mean Time
GPRS	General Packet Radio Service
GPS	Global Positioning System
GSM	Global System for Mobile Communication
ICCID	Integrated Circuit Card Identifier
IMEI	International Mobile Equipment Identity
IMSI	International Mobile Subscriber Identity
LAC	Location Area Code
LBS	Location Based Services
MCC	Mobile Country Code
MNC	Mobile Network Code
MNC	Mobile Network Code
NITZ	Network Identity and Time Zone
NTP	Network Time Protocol

RNC	Radio Network Controller
SMS	Short Message Service
OBD	On-Board Diagnostics
OTA	Over The Air
TCP	Transport Control Protocol
TFTP	Trivial File Transfer Protocol
UDP	User Datagram Protocol
UTC	Universal Coordinated Time
VIN	Vehicle Identification Number

3. DESCRIPTION

After startup, the device automatically turns “on” and registers with the LTE / GSM network. After that, it will attempt to create an IP network connection. If such a connection is unavailable, it will still allow connection through SMS or the USB port. Configuration parameters are stored to flash memory and are automatically applied on device.

The commands can be executed on any available connection as these connections are not exclusive. Commands and responses have identical syntax.

Device has robust lockup protection provided by use of a dedicated hardware watchdog that cycles power and resets the system if a lockup is detected.

The device has more features as follows:

- Multiple location services (GNSS, LBS).
- Supporting A-GPS.
- Low power consumption.
- Using 3-axis accelerometer.
- Automatic time sync (GPS, NITZ, AGPS, NTP).

4. AVAILABLE INTERFACES

4.1 Interface

The device has three external interfaces:


- Message over GSM (SMS)
- Data connection (GPRS)
- USB connection (USB)

All of them can be used to communicate with device.

4.2 SMS

The commands, described in this document, are available in text format. They can be sent in their raw format from user to the device. After that, the results will be returned to user also in their raw format.

The workflow is as follows:

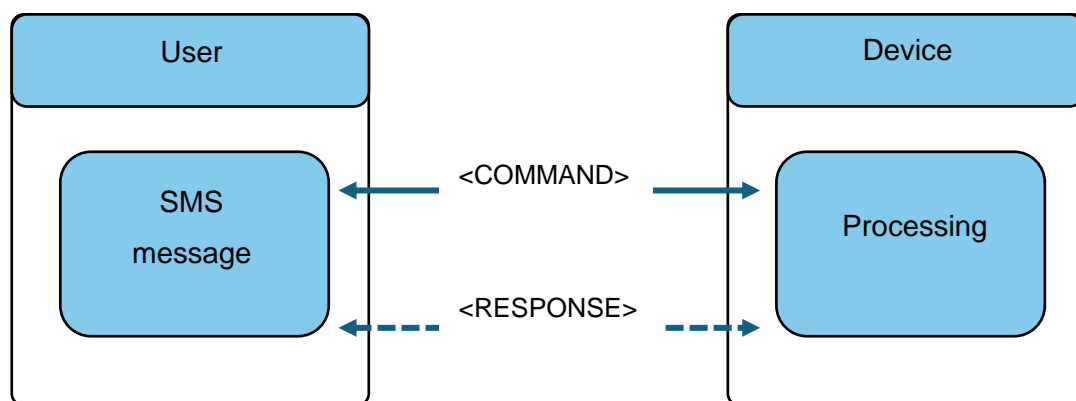

4.3 IP (network connection)


The protocol, described in this document, defines the data packages between server and device. It is based on IP connection over the device's modem. After an IP connection is established between server and device, the data packages are allowed to be exchanged between them.

There are two categories of data packages. One is that device report something to server and server acknowledges it. Another is that server request something and device responses it. The format of data packages will be

showed in the following chapters.

The commands, described in this document, have the specific package and be sent from server to device. The result is another specific package returned from device to server.

Whole workflow is as follows:

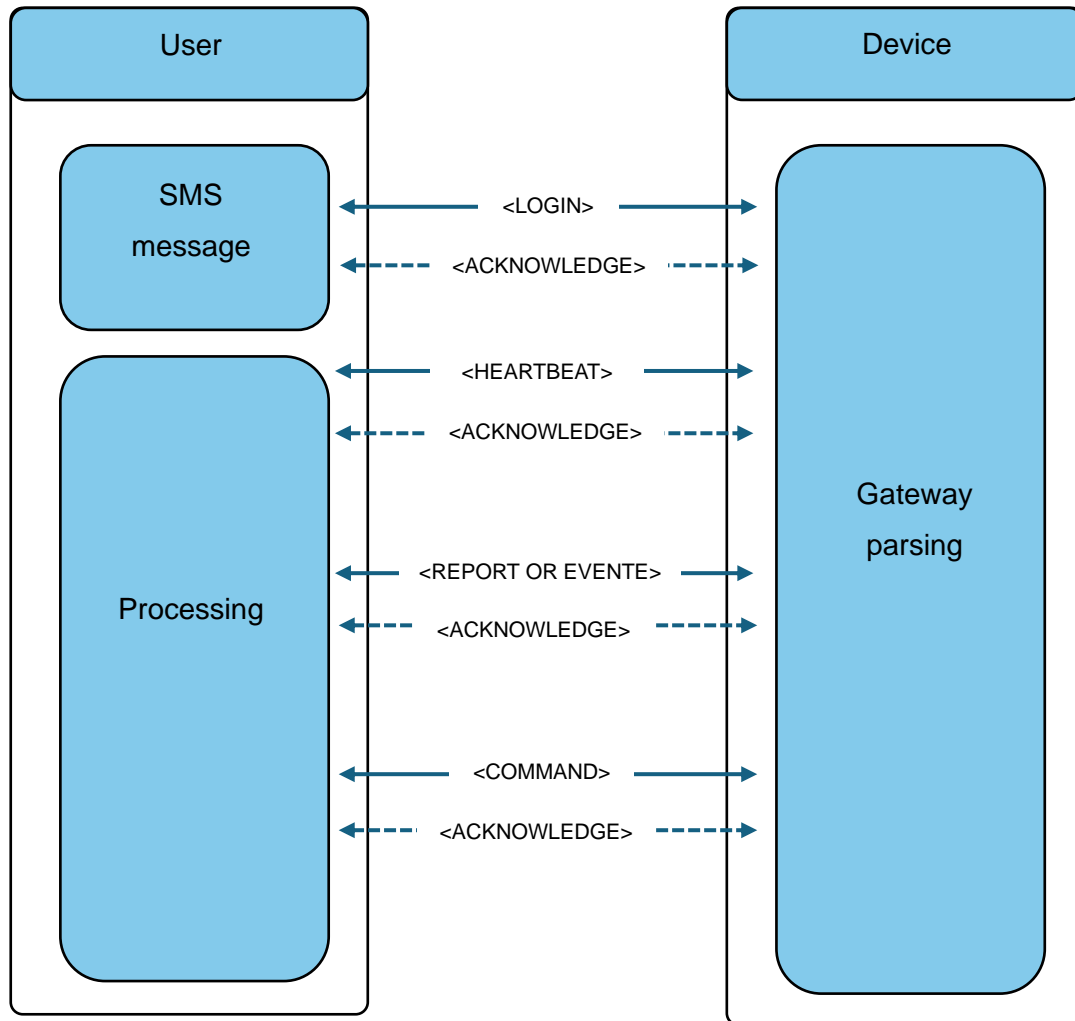

When device is powered up or session is disconnected (device reconnect), it attempts to establish a new connection to server. After being connected, device sends a login package to server at first.

All other packages will not be sent until device received the acknowledge of login package from server.


After the connection is established successfully, the heartbeat package will be sent periodically in a specific interval. The reason is to keep the connection and to detect the availability of connection.

If all acknowledges of three consecutive heartbeat packages are not received, current session will be disconnected, and a new one will be established.

While the connection is valid, device will send packages according to different events. The primary packet is the location report which describes the location of device, and the other packets are alarms configured.

4.4 USB communication

The USB port support commands by serial port as workflow below:

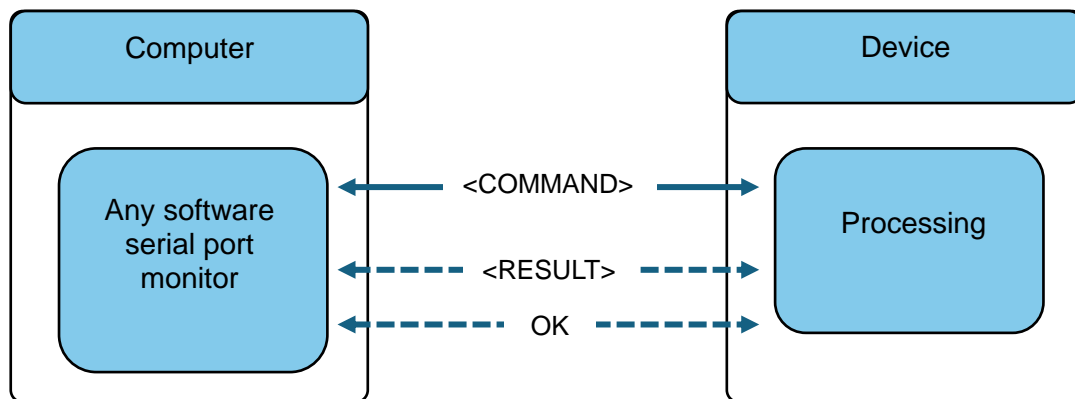

5. DATA TYPES

In this chapter, we discuss common data types used in protocol.

5.1 Integer

Integer is the most important data type in protocol. Most data are represented in an integer, e.g. the data length, the package type, the satellites number, etc.

The positive integers are represented in their binary value in unsigned format.

There are 3 integer types:

- unsigned 8 bits integer, from 0 to 255
- unsigned 16 bits integer, from 0 to 65535
- unsigned 32 bits integer, from 0 to 4294967295

The byte order of an integer can be Big Endian or Little Endian depending on the package.

5.2 String

All strings are coded in UTF-8.

Most strings in package have a limited length, e.g. password, name, etc. We use a fixed size space to contain them. If the size of space is more than the length of string, rest bytes will be zero. The length of string is never more than the size of space.

Only few strings have a variable length. When they appear in package, their length must be able to be calculated based on other data field. The byte order of a string is always from the first byte to the last byte.

5.3 Time

All times are encoded as a 6 Byte integer. All of them are represented in UTC time (GMT). In other words, they are the time in time zone 0. Below is a table showing how the time is represented:

Format	Length [Byte]	Example
Year	1	0x13
Month	1	0x01
Day	1	0x08
Hour	1	0x09
Minute	1	0x1E
Second	1	0x0A

Example: 2019-01-08 09:30:10

Calculated as follows:

- 19 (Decimal) = 13(Hexadecimal)
- 01 (Decimal) = 01(Hexadecimal)
- 08 (Decimal) = 08(Hexadecimal)
- 09 (Decimal) = 09(Hexadecimal)
- 30 (Decimal) = 1E(Hexadecimal)
- 10 (Decimal) = 0A(Hexadecimal)

Then the value is: **0x13 0x01 0x08 0x09 0x1E 0x0A**

5.4 Status Device

Occupy 1 byte, representing each information of the device. Regard 1 byte as 8bits, the lowest bit is 0, the highest is 7 (little-endian). In the process of the data transmitting, the high one comes first and the low one follows. Each bit represents the detailed meaning as follows:

High bit

low bit

7	6	5	4	3	2	1	0
---	---	---	---	---	---	---	---

Note:

- > **Note: The status information refers to the status in a certain time**

For example: 0x4B converts to binary 01001011, which means fortified/high ACC/not charged/vibration alarm / GPS Fixed / DOUT On.

Bit	Description
0	0: Not fortified 1: Fortified
1	0: ACC Off 1: ACC On
2	0: Not charged 1: Charged
3 - 5	000: Normal 001: Vibration alarm 010: Cut-off alarm 011: Low-power alarm 100: SOS alarm
6	0: GPS not Fixed 1: GPS Fixed
7	0: DOUT Off 1: DOUT On

Note:

- > ***DOUT is the abbreviation of digital output port.***

5.5 Course & Status

Two bytes are consumed, defining the running direction of GPS. The value ranges from 0° to 360° measured clockwise from north of 0°.

BYTE1	Bit7	Reserved
	Bit6	DIN Status
	Bit5	GPS real-time/differential positioning
	Bit4	GPS having been positioning or not
	Bit3	East Longitude, West Longitude

	Bit2	South Latitude, North Latitude
	Bit1	Course
	Bit0	
BYTE2	Bit7	
	Bit6	
	Bit5	
	Bit4	
	Bit3	
	Bit2	
	Bit1	
	Bit0	

Note:

- > *DIN is the abbreviation of digital input port.*
- > *The status information in the data packet is the status corresponding to the time bit recorded in the data packet.*

6. PARSING DATA

For parsing the latitude and longitude we will use the Location package as sample. The method used for calculating the latitude and longitude is described below:

6.1 Latitude

Four bytes are consumed, defining the latitude value of location data. The range of the value is 0 ~ 162000000, indicating a range of 0°~ 90°. The conversion method thereof is as follow: Converting the value of latitude and longitude output by GPS module into a decimal based on minute; multiplying the converted decimal by 30000; and converting the multiplied result into hexadecimal.

Example: $22^{\circ}32.7658'' = (22 \times 60 + 32.7658) \times 30000 = 40582974$, then converted into a hexadecimal number $40582974 \text{ (Decimal)} = 26B3F3E \text{ (Hexadecimal)}$ at last, the value is: 0x02 0x6B 0x3F 0x3E.

6.2 Longitude

Four bytes are consumed, defining the longitude value of location data. The range of the value is 0 ~ 324000000, indicating a range of 0° ~ 180°. The conversion method thereof is as follow: Converting the value of latitude and longitude output by GPS module into a decimal based on minute; multiplying the converted decimal by 30000; and converting the multiplied result into hexadecimal.

6.3 GPS Information

The field is 1 Byte displayed by two hex digits, wherein the first one is for the length of GPS information and the second one for the number of the satellites join in positioning.

Example: if the value is 0xCD, it means the length of GPS information is 12

and the number of the positioning satellites is 13. (C = 12Bit Length , D = 13 satellites)

6.4 GSM Signal Degree.

The GSM information range: 0 ~ 100; The stronger the number, the greater the GSM signal

- 0: no signal
- 100: signal is full

6.5 Battery Voltage Level

The range is 0~6 defining the Battery voltage is from low to high.

- 0: Lowest power and power off
- 1: Not enough power to dial a call or send messages.
- 2: Low power and alarm
- 3: Lower power but can work normally
- 3~6: Work in good condition

6.6 Battery Voltage

For example: External Voltage 4.1V, as: 0x01 0x9A

For example: External Voltage 3.8V, as: 0x01 0x7C

6.7 External Voltage

For example: External Voltage 30.00V, As: 0x0B 0xB8

For example: External Voltage 11.85V, As: 0x04 0xA1

7. NETWORK PROTOCOL

7.1 TCP/IP

TCP is a transmission protocol based on IP network. It establishes a stream-like tube between device and server, and provides reliable, ordered, and error-checked delivery of a stream of octets. Any data enter the tube, and they

will arrive their destination with correct content in correct order. As a result, the packages, described in the following chapters, are injected into TCP session without any extra encapsulation.

Its disadvantage is also its stream-like feature. The delivered data may be split and recombined during transmitting (MTU of network). So, in order to recover original package, the destination must detect the package head, specifically the length of package, then get the package body. As a result, the destination must save all partial packages. Only when a whole package is recognized, the destination can process it.

A TCP tube is as below:



8. PACKAGES

The communication is transferred asynchronously in bytes. In general, the structure of a package is described as below:

Data package length: $(10+N)$ Byte

Name	Byte	Description
Star bit	2	0x78 0x78
Package Length	1	Package Length is the total size of Sequence and Content
Protocol number	1	Package identifier
Information content	N	Package sequence number — Unsigned 16 bits integer
Information serial number	2	Package content
Error checking	2	CRC
End Bit	2	0xDA 0x0A

8.1 Start Bit

Fixed value, hexadecimal number **0x78 0x78**

8.2 Package Length

Length = protocol number + Information content + Information serial number + error checking, $(5+N)$ Byte in all, as the information Content is uncertain length data.

8.3 Protocol number

Refer to different “information content” and correspond to the protocol

number, as table:

Type	Value
Login Information	0x01
Location Data	0x17
Status Information (The heartbeat packets)	0x13
Strings Information	0x15
Alarm data	0x16
ICCID Information	0x94
Server send command to device	0x80

8.4 Information content

The specific contents are determined by the protocol numbers corresponding to different applications.

8.5 Information serial number

After turning on the device, it will send the first item of GPRS data (including heartbeat package and GPS/LBS data package); the serial number of this item is "1". After that, the serial number will be added on by 1 automatically at every sending process (including heartbeat package and GPS/LBS data package).

8.6 Error Checking

Device or server can judge the accuracy of data received with identifying code. Sometimes, because of the electronic noise or other interference, data will be changed a little in the transit process. In this case, identifying code can make sure the core or associated core do nothing with such kind of wrong data, which will strengthen the security and efficiency of system. This identifying code adopts CRC-ITU identifying method. The CRC-ITU value is from "Package Length' to "Information Serial Number" in the protocol (including "Package Length" and "Information Serial Number ").

If the receiver receives CRC wrong calculating information, then ignore it and discard this data package.

8.7 End bit

Fixed value by hexadecimal **0x0D 0x0A**

9. DATA PACKET SENT FROM DEVICE TO SERVER

9.1 Login information packet (0x01)

The login information packet is used to be sent to the server with the device ID to confirm the established connection is normal or not. Content for 8 BYTE, A total of 18 bytes.

9.1.1 Device Sending Login information Packet to Server

Name	Bytes	Description
Start Bit	2	0x78 0x78
Length	1	Package Length from protocol number to error checksum - Unsigned 8 bits integer
Protocol Number	1	Package identifier - 0x01
Device ID	8	Device IMEI 15 digits Example: if the IMEI is 123456789012345 The IMEI Contents is: 0x01 0x23 0x45 0x67 0x89 0x01 0x23 0x45
Information Serial Number	2	Package sequence number - Unsigned 16 bits integer
Error Check	2	error checksum
End Bit	2	0x0D 0x0A

9.1.2. Server Responds the Login information Packet.

Name	Byte	Description
Start Bit	2	0x78 0x78
Length	1	Package Length from protocol number to error checksum - Unsigned 8 bits integer
Protocol	1	Package identifier - 0x01

Number		
Information Serial Number	2	Package sequence number - Unsigned 16 bits integer
Error Check	2	error checksum
End Bit	2	0x0D 0x0A

The response packet from the server to the device: the protocol number in the response packet is identical to the protocol number in the data packet sent by the device.

Example of login package and the response:

From device:

78780D010865080044015069003A53F20D0A

From server:

78780501003A568C0D0A

9.2. Location data Packet (0x17)

Location data package is the most important package. It transfers the position and other information of device to server. Its structure is:

9.2.1 Device Sending Location Data Packet to Server

Name		Byte	Description
Start Bit		2	0x78 0x78
Packet Length		1	Package Length from protocol number to error checksum - Unsigned 8 bits integer
Protocol Number		1	Package identifier - 0x17
GPS	Date time	6	Time

information	Quantity of GPS satellites	1	GPS Information
	Latitude	4	0 ~ 90.0 degree: Unsigned 32 bits integer from 0 to 162000000
	Longitude	4	0 ~ 180.0 degree: Unsigned 32 bits integer from 0 to 324000000
	Speed	1	Unsigned 8 bits integer (in km/h)
	Course, Status	2	Course & Status
LBS information	MCC	2	Mobile Country Code - Unsigned 16 bits integer
	MNC	1	Mobile Network Code - Unsigned 8 bits integer
	LAC	2	Location Area Code - Unsigned 16 bits integer
	Cell ID	3	Cell ID with RNC - Unsigned 24 bits integer
Status information	Device Information	1	Status Device
	Battery Voltage Level	1	Battery Voltage Level
	GSM Signal Strength	1	GSM Signal Degree
	Battery Voltage	2	Battery Voltage
	External Vol	2	External Voltage
Mileage		4	Device mileage (in m) - Unsigned 32 bits integer. Range 0 ~1 999999000m
Hourmeter		4	Accumulated time (in seconds) that device identified ignition turned on - Unsigned 32 bits integer.

		Range:0 ~ 1299999999
Information Serial Number	2	Package sequence number - Unsigned 16 bits integer
Error Check	2	Error checksum
End Bit	2	0x0D 0x0A

9.2.1.1 MCC

The country code to which a mobile user belongs, i.e., Mobile Country Code (MCC).

Example: Chinese MCC is 460 in decimal, or 0x01 0xCC in Hex (that is, a decimal value of 460 converting into a hexadecimal value, and 0 is added at the left side because the converted hexadecimal value is less than four digits). Herein the range is 0x0000 ~ 0x03E7.

9.2.1.2 MNC

Mobile Network Code (MNC)

Example: Chinese MNC is 0x00.

9.2.1.3 LAC

Location Area Code (LAC) included in LAI consists of two bytes and is encoded in hexadecimal. The available range is 0x0001-0xFFFFE, and the code group 0x0000 and 0xFFFF cannot be used.

5.3.2. Server Responds the Location Data Packet

Name	Byte	Description
Start Bit	2	0x78 0x78
Length	1	Package Length from protocol number to error checksum - Unsigned 8 bits integer
Protocol Number	1	Package identifier - 0x17

Information Serial Number	2	Package sequence number - Unsigned 16 bits integer
Error Check	2	error checksum
End Bit	2	0x0D 0x0A

The response packet from the server to the device: the protocol number in the response packet is identical to the protocol number in the data packet sent by the device.

Example of login package and the response:

From device:

78782E17180217121736CD021EF55504B49FE30058DA0000000000000000
00460637018B05D10000094A000029EA002620540D0A

From server:

787805170026DF2D0D0A

9.4. Status information Packet (Heartbeat Packet) (0x13)

Status information packet is a data packet to maintain the connection between the device and the server.

9.4.1 Device Sending Status information Packet to Server

Name		Byte	Description
Start Bit		2	0x78 0x78
Packet Length		1	Package Length from protocol number to error checksum - Unsigned 8 bits integer
Protocol Number		1	Package identifier - 0x13
Status information	Device Information	1	Status Device
	Battery Voltage Level	1	Battery Voltage Level

	GSM Signal Strength	1	GSM Signal Degree
	External Voltage	1	External voltage (in V) - Unsigned 8 bits integer
	Language	1	Chinese : 0x01 English : 0x02
Information Serial Number		2	Package sequence number - Unsigned 16 bits integer
Error Check		2	Error checksum
End Bit		2	0x0D 0x0A

9.4.2. Server Responds the Status information Packet.

Name	Byte	Description
Start Bit	2	0x78 0x78
Length	1	Package Length from protocol number to error checksum - Unsigned 8 bits integer
Protocol Number	1	Package identifier - 0x17
Information Serial Number	2	Package sequence number - Unsigned 16 bits integer
Error Check	2	error checksum
End Bit	2	0x0D 0x0A

The response packet from the server to the device: the protocol number in the response packet is identical to the protocol number in the data packet sent by the device.

Example of login package and the response:

From device:

78780A1346062B0F02020233D00D0A

From server:

787805130202E8DA0D0A

9.5. Alarm Packet (0x16)

An Alarm Packet will be sent to server when a specific event occurs. Its structure is:

9.5.1 Device Sending Alarm Packet to Server

Name		Byte	Description
Start Bit		2	0x78 0x78
Packet Length		1	Package Length from protocol number to error checksum - Unsigned 8 bits integer
Protocol Number		1	Package identifier — 0x16
GPS information	Date time	6	Time
	Quantity of GPS satellites	1	GPS Information
	Latitude	4	0 ~ 90.0 degree: Unsigned 32 bits integer from 0 to 162000000
	Longitude	4	0 ~ 180.0 degree: Unsigned 32 bits integer from 0 to 324000000
	Speed	1	Unsigned 8 bits integer (in km/h)
	Course, Status	2	Course & Status
LBS information	LBS	1	LBS - Unsigned 8 bits integer
	MCC	2	Mobile Country Code - Unsigned 16 bits integer
	MNC	1	Mobile Network Code - Unsigned 8 bits integer
	LAC	2	Location Area Code - Unsigned 16 bits integer
	Cell ID	3	Cell ID with RNC - Unsigned 24 bits

			integer
Status information	Device Information	1	Status Device
	Battery Voltage Level	1	Battery Voltage Level
	GSM Signal Strength	1	GSM Signal Degree
	Alarm Type	1	Alarm Type
	Language	1	Chinese : 0x01 English : 0x02
	Battery Voltage	2	Battery Voltage
	External Vol	2	External Voltage
Mileage		4	Device mileage (in m) - Unsigned 32 bits integer. Range 0 ~1 999999000m
Hourmeter		4	Accumulated time (in seconds) that device identified ignition turned on - Unsigned 32 bits integer. Range:0 ~ 1299999999
Information Serial Number		2	Package sequence number - Unsigned 16 bits integer
Error Check		2	Error checksum
End Bit		2	0x0D 0x0A

9.5.1.1 Alarm Type

The alarm type is listed as below:

Alarm	0x00: Normal
	0x01: SOS
	0x02: Power Cut Alarm
	0x03: Shock Alarm
	0x04: Fence In Alarm
	0x05: Fence Out Alarm

	0x06/0x08: Speed Alarm
	0x09: Move Alarm
	0X0C: External Battery Connected
	0x0E: Low Battery Alarm
	0x13: Disassemble Alarm
	0x14: ACC On Alarm
	0x15: ACC Off Alarm
	0x26: Rapid acceleration alarm
	0x27: Rapid deceleration alarm
	0x28: Sharp turn alarm
0x29: Collision alarm	

9.4.2. Server Responds the Alarm Packet.

Name	Byte	Description
Start Bit	2	0x78 0x78
Length	1	Package Length from protocol number to error checksum - Unsigned 8 bits integer
Protocol Number	1	Package identifier - 0x16
Information Serial Number	2	Package sequence number - Unsigned 16 bits integer
Error Check	2	error checksum
End Bit	2	0x0D 0x0A

The response packet from the server to the device: the protocol number in the response packet is identical to the protocol number in the data packet sent by the device.

Example of alarm package and the response:

From device:

```
78783116180217132E10C9021EF4EC04B49FF10019110900000000000000  
0005006310202018B00000000009EC00003D40023070B10D0A
```

From server:

787805160230C3F60D0A

9.9. ICCID Packet (0x094)

9.9.1 Device Sending ICCID information Packet to Server

Name	Byte	Description
Start Bit	2	0x79 0x79
Length	1	Package Length from protocol number to error checksum - Unsigned 8 bits integer
Protocol Number	1	Package identifier - 0x94
FLAG	1	Fixed value: 0x0A
Device ID	8	Device IMEI 15 digits Example: if the IMEI is 123456789012345 The IMEI Contents is: 0x01 0x23 0x45 0x67 0x89 0x01 0x23 0x45
IMSI	8	Sim Card IMSI Number, 15 digits Example: if the IMSI is 123456789012345 The IMSI Contents is: 0x01 0x23 0x45 0x67 0x89 0x01 0x23 0x45
ICCID	10	Sim Card ICCID Number, 20 digits Example: if the ICCID is 01234567890123456789 The ICCID Contents is: 0x01 0x23 0x45 0x67 0x89 0x01 0x23 0x45 0x67 0x89
Information Serial Number	2	Package sequence number - Unsigned 16 bits integer
Error Check	2	error checksum
End Bit	2	0x0D 0x0A

9.9.2. *Server Responds Data Packet*

Server does not need to Respond.

10. DATA PACKET SENT FROM SERVER TO DEVICE

10.1. Packet Sent by Server(0x80)

Name	Byte	Description
Start Bit	2	0x78 0x78
Packet Length	1	Package Length from protocol number to error checksum - Unsigned 8 bits integer
Protocol Number	1	Package identifier - 0x80
Length of Command	1	Server Flag Bit + Length of Command Content Example: measured in bytes, 0x0A means the content of command occupied ten bytes.
Server Flag Bit	4	It is reserved to the identification of the server.
Command Content	M	It is represented in ASC II of string, and the command content is compatible with text message command.
Serial Number	2	Package sequence number - Unsigned 16 bits integer
Error Check	2	error checksum
End Bit	2	0x0D 0x0A

10.2. Packet Replied by Device (0x15)

Name	Byte	Description
Start Bit	2	0x78 0x78
Length	1	Package Length from protocol number to error checksum - Unsigned 8 bits integer
Protocol Number	1	Package identifier - 0x15
Length of Command	1	Server Flag Bit + Length of Command Content Example: measured in bytes, 0x0A means the content of command occupied ten bytes.

Server Flag Bit	4	It is reserved to the identification of the server.
Command Content	M	It is represented in ASC II of string, and the command content is compatible with text message command.
Reserved	2	Reserved. Fixed value: 0x0000
Information Serial Number	2	Package sequence number - Unsigned 16 bits integer
Error Check	2	error checksum
End Bit	2	0x0D 0x0A

Example of alarm package and the response:

Typed command:

CLEARD#

From device:

787811800B000000000434C4541524423000176D60D0A

From server:

78781B1513000000000434C454152443D53756363657373210001000C2F5
F0D0A

11. CRC-ITU LOOKUP TABLE ALGORITHM CODE

```
static const U16 crctab16[ ] =
```

```
{
```

```
    0X0000, 0X1189, 0X2312, 0X329B, 0X4624, 0X57AD, 0X6536, 0X74BF,
    0X8C48, 0X9DC1, 0XAF5A, 0XBED3, 0XCA6C, 0XDBE5, 0XE97E, 0XF8F7,
    0X1081, 0X0108, 0X3393, 0X221A, 0X56A5, 0X472C, 0X75B7, 0X643E,
    0X9CC9, 0X8D40, 0XBFDB, 0XAE52, 0XDAED, 0XCB64, 0XF9FF, 0XE876,
    0X2102, 0X308B, 0X0210, 0X1399, 0X6726, 0X76AF, 0X4434, 0X55BD,
    0XAD4A, 0XBCC3, 0X8E58, 0X9FD1, 0XEB6E, 0XFAE7, 0XC87C, 0XD9F5,
    0X3183, 0X200A, 0X1291, 0X0318, 0X77A7, 0X662E, 0X54B5, 0X453C,
    0XBDCB, 0XAC42, 0X9ED9, 0X8F50, 0XFBEF, 0XEA66, 0XD8FD, 0XC974,
    0X4204, 0X538D, 0X6116, 0X709F, 0X0420, 0X15A9, 0X2732, 0X36BB,
    0XCE4C, 0XD5C5, 0XED5E, 0XFC77, 0X8868, 0X99E1, 0XAB7A, 0XBAF3,
    0X5285, 0X430C, 0X7197, 0X601E, 0X14A1, 0X0528, 0X37B3, 0X263A,
    0XDECD, 0XCF44, 0XFDDF, 0XEC56, 0X98E9, 0X8960, 0XBBFB, 0XAA72,
    0X6306, 0X728F, 0X4014, 0X519D, 0X2522, 0X34AB, 0X0630, 0X17B9,
    0XEF4E, 0XFEC7, 0XCC5C, 0XDDD5, 0XA96A, 0XB8E3, 0X8A78, 0X9BF1,
    0X7387, 0X620E, 0X5095, 0X411C, 0X35A3, 0X242A, 0X16B1, 0X0738,
    0XFFCF, 0XEE46, 0XDCDD, 0XCD54, 0XB9EB, 0XA862, 0X9AF9, 0X8B70,
    0X8408, 0X9581, 0XA71A, 0XB693, 0XC22C, 0XD3A5, 0XE13E, 0XF0B7,
    0X0840, 0X19C9, 0X2B52, 0X3ADB, 0X4E64, 0X5FED, 0X6D76, 0X7CFF,
    0X9489, 0X8500, 0XB79B, 0XA612, 0XD2AD, 0XC324, 0XF1BF, 0XE036,
    0X18C1, 0X0948, 0X3BD3, 0X2A5A, 0X5EE5, 0X4F6C, 0X7DF7, 0X6C7E,
    0XA50A, 0XB483, 0X8618, 0X9791, 0XE32E, 0XF2A7, 0XC03C, 0XD1B5,
    0X2942, 0X38CB, 0X0A50, 0X1BD9, 0X6F66, 0X7EEF, 0X4C74, 0X5DFD,
    0XB58B, 0XA402, 0X9699, 0X8710, 0XF3AF, 0XE226, 0XD0BD, 0XC134,
    0X39C3, 0X284A, 0X1AD1, 0X0B58, 0X7FE7, 0X6E6E, 0X5CF5, 0X4D7C,
    0XC60C, 0XD785, 0XE51E, 0XF497, 0X8028, 0X91A1, 0XA33A, 0XB2B3,
    0X4A44, 0X5BCD, 0X6956, 0X78DF, 0X0C60, 0X1DE9, 0X2F72, 0X3EFB,
    0XD68D, 0XC704, 0XF59F, 0XE416, 0X90A9, 0X8120, 0XB3BB, 0XA232,
    0X5AC5, 0X4B4C, 0X79D7, 0X685E, 0X1CE1, 0X0D68, 0X3FF3, 0X2E7A,
    0XE70E, 0XF687, 0XC41C, 0XD595, 0XA12A, 0XB0A3, 0X8238, 0X93B1,
```

```
0X6B46, 0X7ACF, 0X4854, 0X59DD, 0X2D62, 0X3CEB, 0X0E70, 0X1FF9,  
0XF78F, 0XE606, 0XD49D, 0XC514, 0XB1AB, 0XA022, 0X92B9, 0X8330,  
0X7BC7, 0X6A4E, 0X58D5, 0X495C, 0X3DE3, 0X2C6A, 0X1EF1, 0X0F78,  
};
```

// Calculate the 16-bit CRC of data with predetermined length.

```
U16 GetCrc16(const U8* pData, int nLength)  
{  
    U16 fcs = 0xffff; // initialization  
    while(nLength>0)  
    {  
        fcs = (fcs >> 8) ^ crctab16[(fcs ^ *pData) & 0xff];  
        nLength--;  
        pData++;  
    }  
    return ~fcs; // negated  
}
```

12. COMMANDS LIST

Below is the list of GTK LW SMS commands. The commands sent by the server have the same syntax as the SMS commands.

Sent by Server:

CLEARD#

Command Hexadecimal:

787811800B00000000434C4541524423000176D60D0A

SMS:

CLEARD#

To send commands via Serial Port, the following syntax is used:

Command sent by serial

- #SHOWINFO#
- #ACCALM#4#
- #DELAYACC#10#120#

CENTER

Text Command	Parameter	Sample
CENTER Add	CENTER,A,number#	CENTER,A,13500135000#
CENTER Del	CENTER,D#	CENTER,D#
Command Description	<ol style="list-style-type: none"> 1. Center number can control the oil and power and resume factory settings 2. Center number can receive the call and text of vibration alarm and over speeding alarm. 3. SIM must display the income call number to control oil and power. 4. Only one number can be center number. 	

	5. Change center number must resend the command. 6)Add new center number by CETNER,A, and delete by CENTER,D
Command Feedback	Successful reply: CENTER,OK! 1. CLEAN CENTER,OK! 2. DELETE ALL OK!"

APN		
Text command	Parameter	Sample
APN Setting	APN,[apn],[username],[password]	1 : APN,multigettrak.br,arqia,arqia# 2 : APN,conexão.gettrak.com.br#
Command Description	APN differs according to the local telecom operators : APN request password, please refer to Sample 1, and Sample 2 for no password.	
Command Feedback	Successful reply: APN,OK! Fail reply: APN,FAIL!	

SERVER		
Text command	Parameter	Sample
SERVER Parameter	SERVER,88880,[DNS / IP],[Port]#	SERVER,8888,gtklw.gettrak.com.br,13017#
Command Description	Change the IP and port when move to a new server port : 10~60000	
Command Feedback	Successful reply: SERVER OK! Fail reply: SERVER FAIL!	

TIMER		
Text command	Parameter	Sample
TIMER Parameter setting	TIMER,[uploading interval]#	TIMER,30#

Command Description	1. Time scope : 0, 10~300 seconds time interval ; 2. 0, no data uploading ; 3. The default value is 60 seconds !
Command Feedback	Successful reply: TIMER OK! Fail reply: TIMER FAIL!

STATIC

Text command	Parameter	Sample
STATIC Parameter setting	STATIC, [uploading interval]#	STATIC,5#
Command Description	Time scope : 10~720 (minutes) time interval ; The default value is 60min !	
Command Feedback	Successful reply: STATIC OK! Fail reply: STATIC OK!	

RELAY

Text command	Parameter	Sample
RELAY Parameter	RELAY,0#	Recover oil and power
RELAY Parameter	RELAY,1#	Normal lock Blocks the vehicle if the speed drops below 20 km/h regardless of the ignition status
RELAY Parameter	RELAY,2#	Ultra secure lock Blocks the vehicle if the speed drops below 4 km/h and the status is ignition off
RELAY Parameter	RELAY,3#	Pulsating lock Turn the output on for 5 seconds then turn it off for 10 seconds, repeat the cycle five times in this way and then turn the output on permanently.
Command Feedback	Successful reply: Relayer enable OK! or Relayer disable OK!	

GMT		
Text command	Parameter	Sample
GMT	GMT,[location, time zone],[time zone]#	GMT,E,8# GMT,E,5,30#
Command Description	1. Eastern Hemisphere, E; 2. Western Hemisphere: W Time zone: between 0 and 12	
Command Feedback	Successful reply: GMT OK! Fail reply: GMT FAIL!	

VIBALM		
Text command	Parameter	Sample
VIBALM Parameter	VIBALM,[Sensitivity],[alarming way]#	VIBRATION,2,3# VIBRATION,2#
Command Description	The sensitivity value of the vibration is from 1 to 5, 1 is the most sensitive and 0 is close. 1, SMS + platform alarm 2. Call + platform alarm 3. Call+ SMS + platform alarm 4. Only platform alarm Default 4 . Must set the center number and receiving number.	
Command Feedback	Successful reply: SET VIBALM OK! or VIBALM:OFF! Fail reply: VIBALM FAIL!	

SPDALM		
Text command	Parameter	Sample
SPDALM Parameter	SPDALM,[speed],[alarming way]#	SPEEDING,120,3# SPEEDING,120#
Command Description	The speed scope is form 50-200, if the speed is nothiscope, the alarm is off. 1, SMS + platform alarm	

	2. Call + platform alarm 3. Call+ SMS + platform alarm 4. Only platform alarm Default 4 . Must set the center number and receiving number.
Command Feedback	Successful Setting: SPDALM,OK! Fail Setting: SPDALM FAIL!

RESET

Text command	Parameter	Sample
RESET	RESET#	RESET#
Command Description	Reset the device	
Command Feedback	Successful Setting : RESET OK !	

FACTORY

Text command	Parameter	Sample
FACTORY	FACTORY#	FACTORY#
Command Description	Sending this command will restore the parameters set by the user and restore to the factory default state; Note: IP and port and password are not recovered,subject to the one set lastly.	
Command Feedback	Successful Setting : FACTORY OK! Fail Setting : FACTORY FAIL!	

WKMD

Text command	Parameter	Sample
WKMD Parameter	WKMD,[MODE]#	WKMD,0# WKMD,1#
Command Description	Mode: 0, G-SENSOR upload mode Mode: 1, ACC status upload mode The default is: Mode 1 "ACC mode"	
Command	Successful Setting : WORK MODE:MOVE/STATIC! Or WORK	

Feedback	MODE:ACC ON/OFF!
----------	------------------

ACCON		
Text command	Parameter	Sample
ACCON	ACCON,[upload interval]#	ACCON,60#
Command Description	Set interval of ACCON mode Time: 0, 10~300 seconds; 0 means off Default: 60 seconds	
Command Feedback	Successful Setting: ACCON TIME,OK! or ACCON TIME,CLOSE!	

ACCOFF		
Text command	Parameter	Sample
ACCOFF	ACCOFF,[upload interval]#	ACCOFF,60#
Command Description	Set interval of ACCOFF mode Time: 0, 10~720 minutes; 0 means off Default: 60 minutes	
Command Feedback	Successful Setting: ACCOFF TIME,OK! or ACCOFF TIME,CLOSE!	

POWER			
Text command	Parameter		Sample
POWER,[value low Battery],[value low voltage external]#	POWER,{value low battery},{value low voltage external}#		POWER,3.5,13.5#
Command Description	Configure low battery alarm and low external voltage alarm command.		
Command Feedback	Successful Setting: POWER OK! Fail Setting: POWER FAIL!		

HBT

Text command	Parameter	Sample
HBT	HBT,Minute#	HBT,5#
Command Description	This command is used to set the heartbeat packet updata time interval; Min: 1 to 60 minutes, the default is 3 minutes;	
Command Feedback	Successful Setting : HBT OK! FAIL Setting : HBT FAIL!	

WHERE

Text command	Parameter	Sample
WHERE	WHERE#	WHERE#
Command Description	Check the longitude and altitude and other information of the device	
Command Feedback	Reply with longitude and altitude, speed and IMEL.	

123

Text command	Parameter	Sample
123	123	123
Command Description	Check the location link of Google map	
Command Feedback	<Datetime:12-07-05 13:21:30> http://maps.google.com/maps?q=N22.540885,E113.95265	

VERSION

Text command	Parameter	Sample
VERSION	VERSION#	VERSION#
Command Description	The command is to check the software version	
Command Feedback	[SYS-TIME:2021/12/28 14:26]-[SYS-VER:GW05.BX.V20]	

PARAM		
Text command	Parameter	Sample
PARAM	PARAM#	PARAM#
Command Description	The command is to check the settings and the default parameter.	
Command Feedback	IMEI:865080041254372; IP:gtklw.gettrak.com.br:13017; CENTER:15016015801,,; APN:conexao.gettrak.com.br; TIMER:60;STATIC:60; WKMODE:ACCON/ACCOFF; ACCTIME:60,60;GMT:E0;	

STATUS		
Text command	Parameter	Sample
STATUS	STATUS#	STATUS#
Command Description	The command is designed for checking the device's working status.	
Command Feedback	GSM:HIGH; GPSST:FIXED; GPSSGL:HIGH; RELAYER:DISABLED; ACC:ON; PWR:ON,16.22; BAT:4.00;	

ACCVIRTUAL		
Text command	Parameter	Sample
ACCVIRTUAL	ACCVIRTUAL,[MODE]#	ACCVIRTUAL,0# ACCVIRTUAL,1#
Command Description	Set Virtual ACC Status: 0: off; 1: on; This function is a virtual ACC function, which can be turned on when the user does not connect the ACC line or uses the ACC line for other purposes; If the virtual ACC function is turned on, the hardware ACC line is used as the SOS function, and the ACC state is judged by the device	

	sensor; after this function is turned on, the device is in motion and the ACC is turned on, and the device is in a static state, then the ACC is turned off; the default virtual ACC is off;
Command Feedback	Successful Setting : ACCVIRTUAL:ON! ACCVIRTUAL:OFF! FAIL Setting : ACCVIRTUAL : FAIL!

DELAYACC

Text command	Parameter	Sample
DELAYACC	DELAYACC,[TIME_ON],[TIME_OFF]#	DELAYACC,10,120#
Command Description	Set delay judgement time under virtual ACC This function is the delay judgment time of the ACC ON and ACC OFF states when the virtual ACC is turned on; TIME_ON: When the virtual ACC is turned on, how many seconds after the device detects motion, judges that the ACC is turned on; range: 10~60; default value: 10 seconds TIME_OFF: When the virtual ACC is turned on, after the device detects how many seconds it is still, it is judged that the ACC is turned off; Range: 10~120; Default: 120 seconds;	
Command Feedback	Successful Setting : DELAYACC OK!	

SLP

Text command	Parameter	Sample
SLPON	SLPON#	SLPON#(Turn on sleeping mode)
SLPOFF	SLPOFF#	SLPOFF#(Turn off sleeping mode (default))
Command Description	<ol style="list-style-type: none"> 1. This command is used to control whether the device enters the sleep mode when it is at rest to save power consumption. 2. Setting the still sleep function will only make the GPS of the device go to sleep, and GPRS is still connected to the platform. 3. After setting the static sleep function successfully, it can greatly reduce the power consumption of the device in the static state, and the current is about 5MA (applicable to small vehicles such as motorcycles) 4. This function device is turned off by default, namely: SLPOFF# status; 	
Command	Successful Setting : STATIC SLEEP MODE:ON! STATIC SLEEP	

Feedback	MODE:OFF! FAIL Setting : STATIC SLEEP MODE:FAIL!
----------	---

ACCVIRTUALPOWER

Text command	Parameter	Sample
ACCVIRTUALPOWER	ACCVIRTUALPOWER, [value_external_voltege],[activated/deactivated]#	ACCVIRTUALPOWER,1 5.5,1# ACCVIRTUALPOWER,1 5.5,0#
Command Description	Configure the minimum voltage value to consider the vehicle with the ignition on.	
Command Feedback	Successful Setting : ACCVIRTUALPOWER:ON! Or ACCVIRTUALPOWER:OFF! FAIL Setting : ACCVIRTUALPOWER: FAIL!	

SHWALM#

Text command	Parameter	Sample
SHWALM	SHWALM #	SHWALM #
Command Description	Query the alarm status Including: vibration alarm, ACC alarm, overspeed alarm, power failure alarm	
Command Feedback	IMEI:865080041254372; VIBALM:3,3; SPDALM:3,100; PWRALM:3; ACCALM:1;	

PWRALM,Mode#

Text command	Parameter	Sample
PWRALM	PWRALM,[MODE]#	PWRALM,3#
Command Description	Set power failure alarm. Mode: 1, SMS + platform alarm 2. Call + platform alarm 3. Call+ SMS + platform alarm 4. Only platform alarm	

Command Feedback	Successful Setting : SET PWRALM,OK! or PWRALM:OFF!
------------------	--

ANGLE		
Text command	Parameter	Sample
ANGLE	ANGLE,[ANGLE]#	ANGLE,45#
Command Description	Angle range: 0, 8~90 degrees. 0 means off. After the setting is successful, if there is an angular deviation in the vehicle motion, the corresponding position will be compensated. Default: 90 degree	
Command Feedback	Successful Setting : ANGLE:ON;VALUE:30; ANGLE,OFF! or ANGLE,ON! FAIL Setting : ANGEL FAIL!	

MILEAGE		
Text command	Parameter	Sample
MILEAGE	MILEAGE,0#	MILEAGE,0#
MILEAGE	MILEAGE,1#	MILEAGE,1#
Command Description	Enables or disables calculating mileage on the tracker.	
Command Feedback	Successful Setting : MILEAGE,ON! or MILEAGE,OFF! FAIL Setting : MILEAGE FAIL	

MILSET		
Text command	Parameter	Sample
MILSET	MILSET,100#	MILSET,100# Valor em quilômetros
Command Description	Sets initial odometer value	
Command Feedback	Successful Setting : MILEAGE,OK! FAIL Setting : MILEAGE FAIL!	

CMIL		
Text command	Parameter	Sample
CMIL	CMIL#	CMIL#
Command Description	Reset odometer value	
Command Feedback	Successful Setting : CLEAN MILEAGE DATA,OK	

SMIL		
Text command	Parameter	Sample
SMIL	SMIL#	SMIL#
Command Description	Read the current odometer value	
Command Feedback	Successful Setting : MILEAGE:OFF;VALUE:0.000KM;	

OUTPUTNO		
Text command	Parameter	Sample
OUTPUTNO#	OUTPUTNO#	OUTPUTNO#
Command Description	OUTPUTNO# Normal oil and power off mode (default)	
Command Feedback	Successful Setting : OUTPUTNO OK!	

OUTPUTNC		
Text command	Parameter	Sample
OUTPUTNC#	OUTPUTNC#	OUTPUTNC#
Command Description	Reverse fuel cut-off mode (In the STATUS# command, you can check the current fuel and power off mode; RELAYER: ENABLE, NO;/ RELAYER: ENABLE, NC; or RELAYER: DISABLE, NO;/ RELAYER: DISABLE, NC;)	
Command	Successful Setting : OUTPUTNC OK!	

Feedback	
----------	--

TOGGLE

Text command	Parameter	Sample
TOGGLE,X#	TOGGLE,X#	TOGGLE,3#
Command Description	TOGGLE the relay output for 1 second for X times,it must consider if the device is on OUTPUTNO# or OUTPUTNC#	
Command Feedback	Successful Setting : TOGGLE OK!	

SIMDETECT

Text command	Parameter	Sample
SIMDETECT,X#	SIMDETECT,X#	SIMDETECT,1#
Command Description	Activate relay output when SIM card is removed and this command is to switch on/off. SIMDETECT,1# means detect SIM card removal SIMDETECT,0# means not detect SIM card removal(default)	
Command Feedback	Successful Setting : SIMDETECT ON! Or SIMDETECT OFF!	

PROFILE

Text command	Parameter	Sample
PROFILE	PROFILE,[MODE]#	PROFILE,1# PROFILE,2# PROFILE#
Command Description	PROFILE,X# x = 1 Profile 01 Car x = 2 Profile 02 Moto By default PROFILE,1#	
Command Feedback	Successful Setting : PROFILE X OK!	

GBLOCK		
Text command	Parameter	Sample
GBLOCK	GBLOCK,X#	GBLOCK,0# GBLOCK,1#
Command Description	Set three commands in one time: X=0 SIMDETECT,0# OUTPUTNO# RELAY,0# X=1 SIMDETECT,1# OUTPUTNC# RELAY,1#	
Command Feedback	Successful Setting : GBLOCK 1 OK! or GBLOCK 2 OK!	

GBLOCK		
Text command	Parameter	Sample
GBLOCK	GBLOCK#	GBLOCK#
Command Description	Return with the status of three commands	
Command Feedback	Successful Setting : SIMDETECT,1# OUTPUTNC# RELAY,1#	

HORIMETER		
Text command	Parameter	Sample
HORIMETER	HORIMETER,[time]#	HORIMETER,1000#
Command Description	Set the ACC ON cumulative time, S: 0~999999999 seconds.	
Command Feedback	Successful Setting : HORIMETER OK!	

CLRMETER

Text command	Parameter	Sample
CLRMETER	CLRMETER,5#	CLRMETER#
Command Description	Clear ACC statistics time	
Command Feedback	Successful Setting : CLEAR HORIMETER OK!	

SHWMETER

Text command	Parameter	Sample
SHWMETER	SHWMETER,5#	SHWMETER#
Command Description	Query ACC statistical time	
Command Feedback	Successful HORIMETER: 1000	

ICCID

Text command	Parameter	Sample
ICCID	ICCID#	ICCID#
Command Description	Query the SIM card ICCID of the tracker	
Command Feedback	Successful Setting : ICCID:89860000191948733878	

SLEEP

Text command	Parameter	Sample
SLEEP	SLEEP,5#	SLEEP,5# (em minutos)
Command Description	Sets the time interval after the device stops or delays the ignition when it will turn off GPS and GPRS communication. Value in minutes. Interval: 30~600 seconds, multiples of 10; By default:300 seconds	
Command	Successful Setting : SLEEP OK!	

Feedback	
----------	--

SETNET		
Text command	Parameter	Sample
SETNET	SETNET,[MODE]#	SETNET,1#
Command Description	Set the current network mode X:0,1,2, default 0, automatic 0: Automatic, optimize 4G network, then GSM 1: LTE Only, only 4G network; 2: GSM Only, only GSM network;	
Command Feedback	Successful Setting : SETNET OK!	

SENLEL		
Text command	Parameter	Sample
SENLEL	SENLEL,X#	SENLEL,5#
Command Description	X: between 1~10; default level 3 Set G-SENSOR sensitivity, this command affects the sensitivity of device sleep and wake up, the lower the level, the more sensitive;	
Command Feedback	Successful Setting : SENLEL OK!	

ACCALM		
Text command	Parameter	Sample
ACCALM	ACCALM,[MODE]#	ACCALM,0# ACCALM,1#
Command Description	Set the ACC alarm Status: 1, Turn on the ACC alarm; 0, close the ACC alarm;	
Command Feedback	Successful Setting : ACC ALARM:OK! or ACC ALARM:OFF	

SPEED		
Text command	Parameter	Sample
SENLEL	SPEED,[speed_alarm],[speed_output]#	SPEED,100,1#
Command Description	Configure the speed alarm and output activation when the alarm occurs	
Command Feedback	Successful Setting : SPEED OK!	

HTPOTA		
Text command	Parameter	Sample
HTPOTA	HTPOTA,[DNS/ IP],[PORT]#	HTPOTA,18.230.200.174,80#
Command Description	The tracker will access the indicated server and port to perform the firmware update	
Command Feedback	Successful Setting : OTA RUN... FAIL Setting : OTA FAIL...	